




New Processes and Controls Improve Medical Device Performance

By Jay Tourigny, MicroCare Corporation

This article was first published in March 2015

In a perfect world, every component of a medical device would be manufactured to exact dimensional specifications without variation. Sadly, the world is far from perfect so engineers design tolerances into almost every component. These tolerances define the maximum degree of dimensional variation any component can carry. Fundamentally, it's

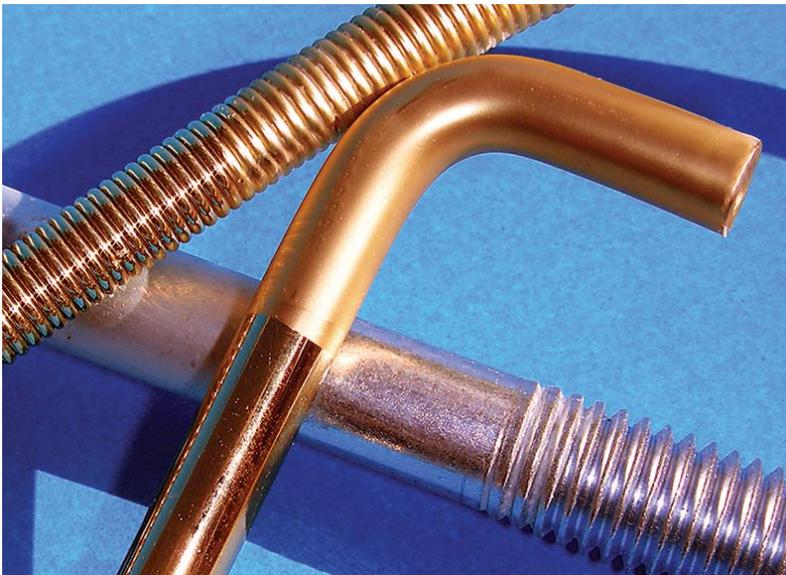

all about costs. Since improved perfection generally will drive manufacturing costs higher, it makes economic sense to accommodate minor dimensional variations during manufacturing as long as those variations do not compromise the performance of the finished assembly.

But there is a catch, and it is a familiar challenge faced by manufacturing engineers: the difficulty of “stacked tolerances” and how they impact the functionality of many complex devices. This report

MICROCARE MEDICAL, a Division of MicroCae Corp.

595 John Downey Drive, New Britain CT 06051 USA


Tel: 860.827.0626 Fax: 860.827.8105 In North America, dial: 800.638.0125 On the Web: www.MicroCareMedical.com

The term “MicroCare” and the MicroCare Medical logo are registered trademarks of MicroCare Corp.

will examine the availability of new process options engineered to manage the cumulative effects of dimensional variability in medical devices.

The Cost of Tight Tolerances

Stacked tolerances are an inevitable element of multi-part mechanical assemblies with moving parts. Hypothetically, if a device features four or five nested components, such

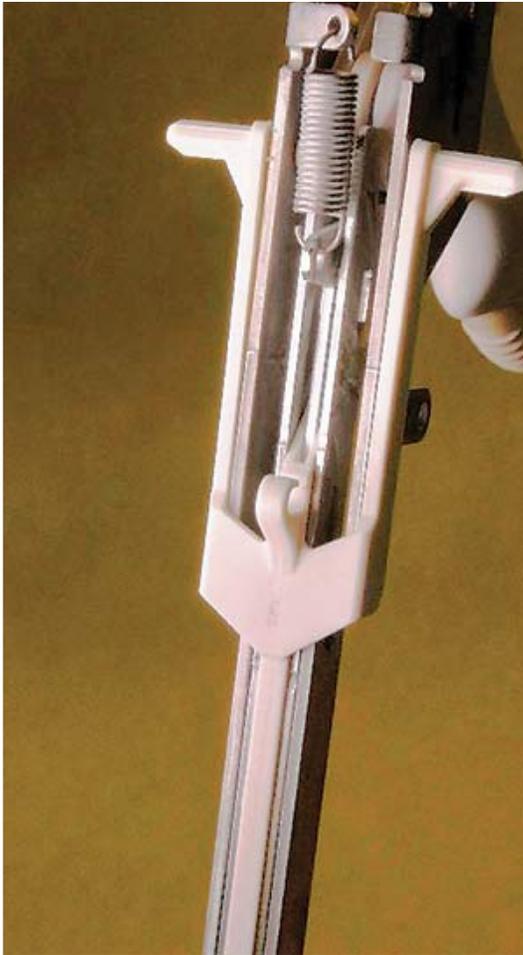

as shown in this photo, it is quite possible that sheer random variation of all the components may fall within the worst case limits of their design tolerances. This is especially true with plastic parts.

This presents two challenges to a manufacturer. First, during the assembly process mated parts may fit too tightly, which makes assembly difficult and slow. Alternatively, friction from overly-tight components may degrade the operation of the finished device. The device may function poorly because the accumulated tolerances restrict free movement.

Addressing tolerance issues has implications all the way to the end-user, especially for a medical device that must perform its mechanical function precisely and smoothly. One option for dealing with stacked tolerances would be to design everything with tighter dimensional tolerances. This clearly

would ensure higher levels of performance. But in the interest of keeping costs low, ever-tighter tolerances usually are not the most cost-effective choice.

The obvious answer is to lubricate the components. This can be done several ways. Design engineers often specify plastic or nonferrous materials because they have inherent lubrication properties. Engineers also may specify a silicone- or hydrocarbon-based lubricant that could reduce friction.

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com

But these strategies have drawbacks. End-use loading requirements may preclude the use of less durable plastics and metals. Silicone and hydrocarbon lubricants also present cleanliness problems because their tendency to readily transfer to untreated surfaces and to attract and hold surface contamination that may be problematic in the end use.


The Dry Lubricant Answer

An often-overlooked but cost-effective way to address the challenges of stacked tolerances is to use a dry lubricant. On the consumer level, almost everyone is familiar with powdered graphite that often is used to lubricate hinges and drawers. For industrial applications, modern dry lubricant coatings usually are based on a form of dry polytetrafluoroethylene (PTFE).

To apply the lubricant, a microdispersion of PTFE in a carrier fluid is used. The ratio of PTFE in the carrier is normally specified as a percentage, by weight. The microdispersion is applied to parts using a spray or simply by dipping the parts into a liquid bath. The carrier fluid then evaporates away leaving a smooth, dry PTFE coating on the part.

Dry lubricants are a powerful addition to an engineer's bag of tricks. Dry lubricants are versatile: they can be engineered from a very thin to a reasonably thick coating. They are compatible with most plastics and metals. They readily conform to virtually any surface geometry including braided wire cables and complex meshing; they readily penetrate into complex shapes and blind vias. They are easy to apply in-house and may easily be incorporated into the assembly process.

Dry lubricants have other advantages as well. Because components coated with dry lubricants will snap together easily, they speed the assembly of complex devices. Dry

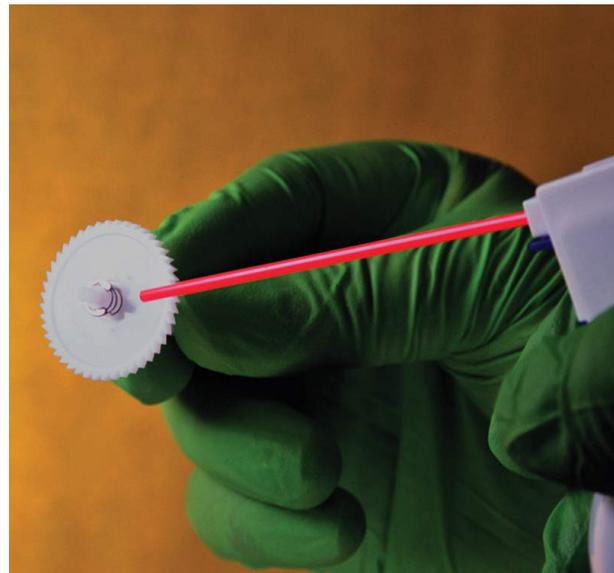

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com

lubricants also are clean, non-migrating and can be easily applied in a variety of processes (see the “How to Apply” White Paper available on this web site). Medical grade formulas are available with ISO 10993 certification, nonpyrogenic properties, and full compatibility with sterilizing processes. There are few, if any, toxicity or handling issues with PTFE materials, and nonflammable carriers can be specified for maximum safety. Lastly, the coating can be used as-is, or a brief heat-treating process can convert the coating into a hard, durable and highly attractive finish.

But the “killer app” for dry lubricants is how they overcome stacked tolerance issues and improve the quality and performance of a finished device. Dry PTFE lubricants instantly will reduce the coefficient of friction on a treated part’s surface to 0.06. This translates into a 25-30% reduction in actuation forces and smoother operation, greatly improving product performance. In fact, many complex medical devices manufactured today would not be commercially viable without a dry lubricant.

Too Many Choices

Choosing the correct dry lubricant and coating process can mean significant time and cost savings in the assembly room, so it is important to consider all the variables in play.

Some vendors simply sell the PTFE as a dry powder, which resembles a large bag of flour or sugar. Customers then select their own carrier fluid, which is problematic because the subtleties of the chemistries may not be well-understood. Home-grown dry lubricants such as these often suffer variation in both particle size and the ratio of PTFE solids to the carrier fluid, compromising the lubrication properties.

Other vendors, such as MicroCare Medical, offer engineered and calibrated medical grade products that are ready-to-use. Using high-purity carrier fluids that meet global regulations the dry lubricant is tailored to user specifications making process validation fast and simple.

Equipment for coating application is also worthy of close evaluation. In order to control evaporation and maintain lubricant-to-carrier ratios for maximum consistency and quality, engineers can now specify process-specific equipment for the coating step. For high volume production, features in this new equipment may include engineered dip

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com

tanks with carrier fluid recovery systems, temperature controls, automated feeding systems such as hoists or conveyers. As an alternative, moderate to low volume production may use programmable spray systems or brush applicators.

PTFE Content Is Key

A major challenge to maintaining a quality coating process is to manage the “hang-time” of the PTFE particles in the carrier fluid. Large PTFE particles found in many formulas are physically heavy and have a brief “hang time” within the carrier fluid (see photo, below, showing how certain formulations have inferior “hang time” which can cause irregular coatings). Large PTFE particles, especially when used with the wrong carrier fluid, quickly sink to the bottom of the dip tank or storage vessel, separating from the carrier fluid and degrading the consistency of the coating application.



An optimal solution to the short “hang time” of PTFE particles is to specify a pre-calibrated fluid using micro-particles. For example, MicroCare Medical uses proprietary “microdispersion” PTFE technology with the smallest possible PTFE particles. These

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com

microscopically small particles will stay in suspension far longer than heavier particles resulting in a thin, even, smooth film over the entire treated surface.

Naturally, there is no free lunch. Dry lubricants are most effective when the ratio of PTFE solids to the carrier fluid remains constant and correct. This is vitally important to ensure a smooth, streak-free coating over long production runs. The first challenge is controlling the evaporation of the carrier fluid. As noted above, PTFE dry lubricants are mixed with a carrier fluid that by design evaporates very quickly. This is necessary because speedy drying maintains high production throughput and improves the consistency of the coating on the device.

But, speedy evaporation also means the carrier fluid may evaporate out of the dip tank or storage vessel during the coating process. This causes the PTFE to carrier ratio to wander out of spec. The result is inconsistent coating. Many users will specify a process that replaces the contents of dispersion storage vessels with new material after a

defined amount of time. This is an effective option, but can be wasteful and expensive. An easy means to monitor the lubricant to carrier ratio is required.



Photo, left: The new MicroCare Medical Kwik-Check device calibrates the PTFE coating for optimal results. The device measures the PTFE content of a small sample, providing instant and highly accurate updates on the evaporative losses of the carrier fluid. The results can be easily translated into instructions to “top off” the carrier fluid that will keep the lubricant bath within parameters.

Up to recently, the most precise process to measure the micro dispersion ratio is to “boil down” a measured sample and evaporate away the carrier fluid. The weight of the dried PTFE residue is then compared to the weight of the original sample. This is highly accurate but slow, taking a minimum of several hours for accurate results. Because this process is slow, shortcut methods are used compromising coating consistency.

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com

Recently, a more advanced option using an automatic fluid test meter for PTFE content measurement has been introduced to the market. The Duraglide® Kwik-Check™ test meter from MicroCare Medical delivers fast and precise PTFE content determination with accuracy to two decimal places. A 50 mL sample is pulled from the PTFE dip tank and placed into a glass sampling vial. The vial is inserted into the Kwik-Check™ meter and is instantly analyzed. A color touchscreen then displays the PTFE content as a numerical percent readout.

This new measurement method takes minutes and completely eliminates time-consuming boil-downs and guess-work by operators. There is no contact with the lubricant (which can be returned to the dip tank) and there is no chance of operator error. If needed, a simple conversion chart makes it easy to determine the amount of “top-off” fluid or concentrate needed to maintain proper dispersion ratios.

The Bottom Line

For medical device design engineers and manufacturers, dry lubricant coatings can play a huge role in enhancing the performance and consistency of a finished device.

Although there are numerous challenges that can impact the results, the most essential issues are understanding the coating application process and keeping the PTFE dispersion ratios consistent.

Developing a partnership with a vendor that understands the coating process will go a long way to improving the quality and consistency of finished product. This partner should be able to offer insights on regulatory compliance, the chemical parameters that affect the coating, and suggestions to make the coating as consistent, efficient and sustainable as possible. The coatings partner also should be able to evaluate and optimize the client’s process — i.e., the physical footprint of a system, electrical requirements, maintenance requirements, waste disposal and waste minimization. Ultimately this emphasis on process control will help a company maximize its profitability.

About the Author—

Jay Tourigny is Vice President of Operations at MicroCare Medical and can be reached at JayTourigny@microcare.com. MicroCare Medical is a supplier of advanced cleaners, carrier additives, coatings and lubricants to medical device designers and manufacturers throughout North America and Western Europe. Learn more about MicroCare Medical's "Expertise in Action" and 48-hour turn-around policy at www.microcaremedical.com.

About MicroCare Medical—

MicroCare Corporation is the manufacturer of the many cost-effective, environmentally-sensitive chemical products and tools used for critical cleaning, coating and lubrication. Since 1983, MicroCare has been helping customers to improve their products and processes in industries as diverse as electronics, metal finishing, transportation, medical devices and aerospace. MicroCare constantly innovates to help companies lower their costs and improve their quality.

For further information contact:

For all media enquires contact Sally Stone at Hart Marketing International. Email sally@hartmarketing.co.uk or call +44 (0)1425 611600

MICROCARE CORPORATION

On the Web: www.MicroCareMedical.com